

AQUAHOT MIXING VALVE ADJUSTMENT

If your AquaHot starts producing water that is only lukewarm, the following procedure will probably solve the problem:

1. Turn on the diesel burner and let it run until it shuts off automatically.
2. Take the cover off the AquaHot.
3. The mixing valve is located directly under the burner.  
It has a large black knob on it that has a red mark on it.  
Turn the valve counterclockwise (toward the tank) a quarter turn.  
Check to see if the water is hot.
4. If this does not work, turn the valve all the way to the right,  
then all the way to the left, bringing it back to its original position.
5. If this does not work, the mixing valve needs a new kit.  
It can be purchased from AquaHot for \$13.